



Occulights Setup Guide

1. Connect the light to the PoE power.
2. Connect the Hub to the USB-C power.
3. Open the Wi-Fi settings on your computer or mobile device.
4. Locate the OCCUHUB + (MAC address). The HUB has its own MAC address, which is located on the two labels on the package.
5. Select the OCCUHUB you want to install, and the Wi-Fi manager app will automatically open.

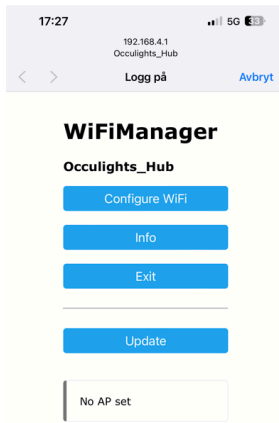

6. Select your local Wi-Fi network and enter the network credentials.

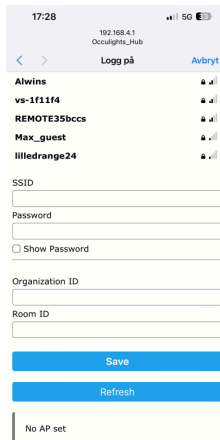

7. If you have several OCCUHUBs, we recommend that you enter some of the following IDs: Organization ID, Location ID, Floor ID, Room ID.
8. The KIT (HUB and LIGHT) is now online and should sync within 6 minutes.

The default “occupation time” after movement is detected is set to 5 minutes. This means that the sync time between the two devices can take up to 5 minutes. To add more than one light to a single hub, you need to log in to your administration panel. In the administration panel, you have more options to configure the HUB and add or remove lights from the setup. It is very important that the local Wi-Fi is stable for the Occulights KIT to work properly.

Best Regards,
Occulights Support Team